


**Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 13-P Steckdose  
lt. DIN/ISO Norm 11446**


**Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 11446 prise 13-P**

**Fitting instructions electric wiringkit  
towbar with 13-P socket up to  
DIN/ISO norm 11446**

**Montage-handleiding elektrokabelset voor  
trekhaak met 13-P contactdoos  
vlg. DIN/ISO norm 11446**

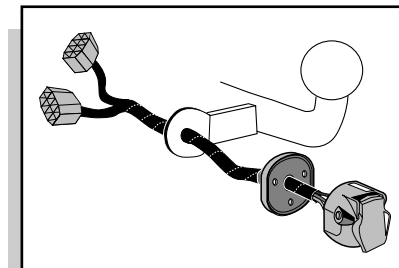

OPEL COMBO C 2002-

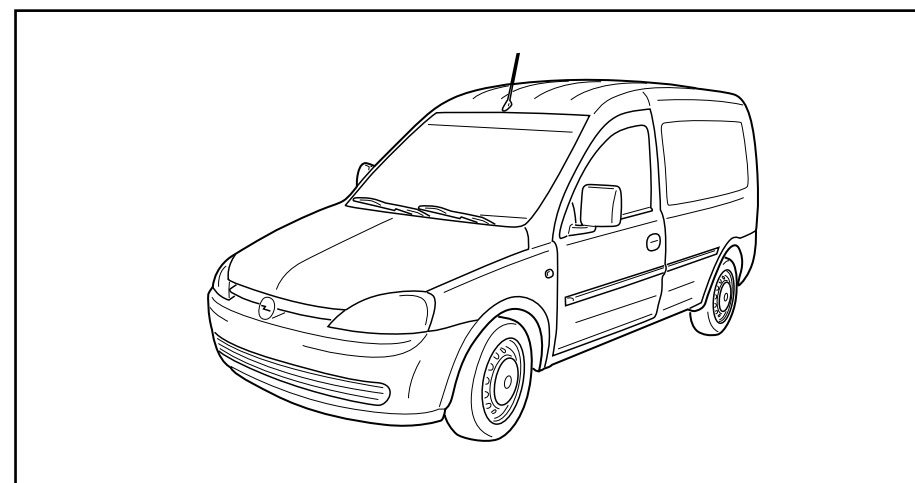














Bestel Nr.: OP-027-DL

\* Teilliste



\* Liste de pieces

\* Part list



\* Onderdelenlijst

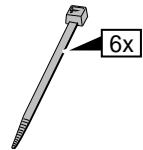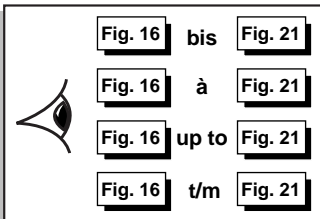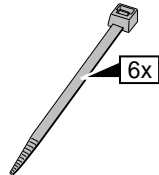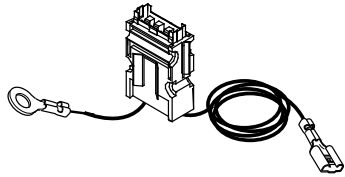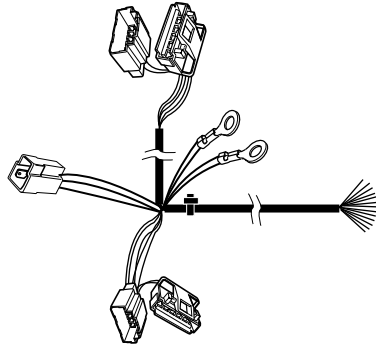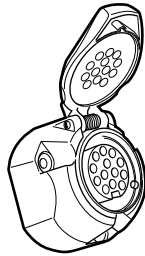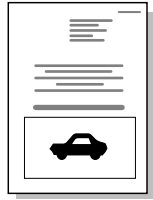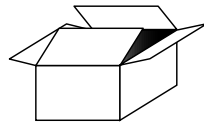


1

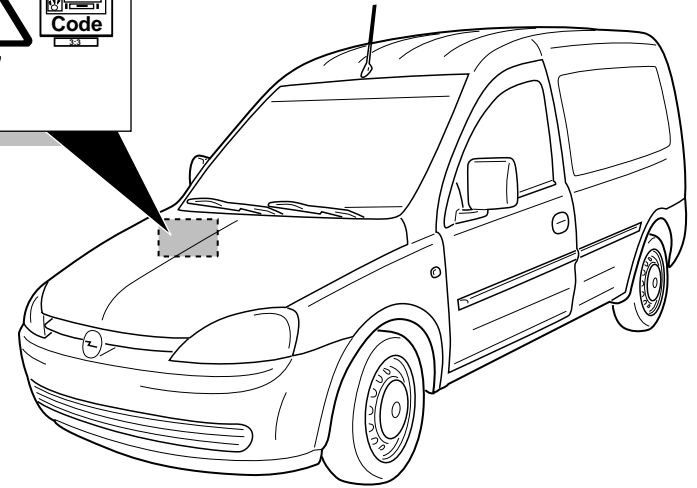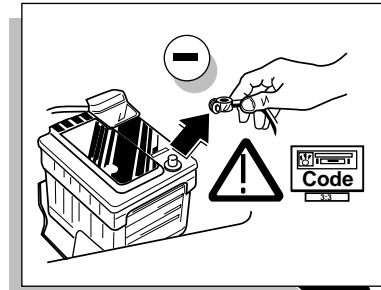


2

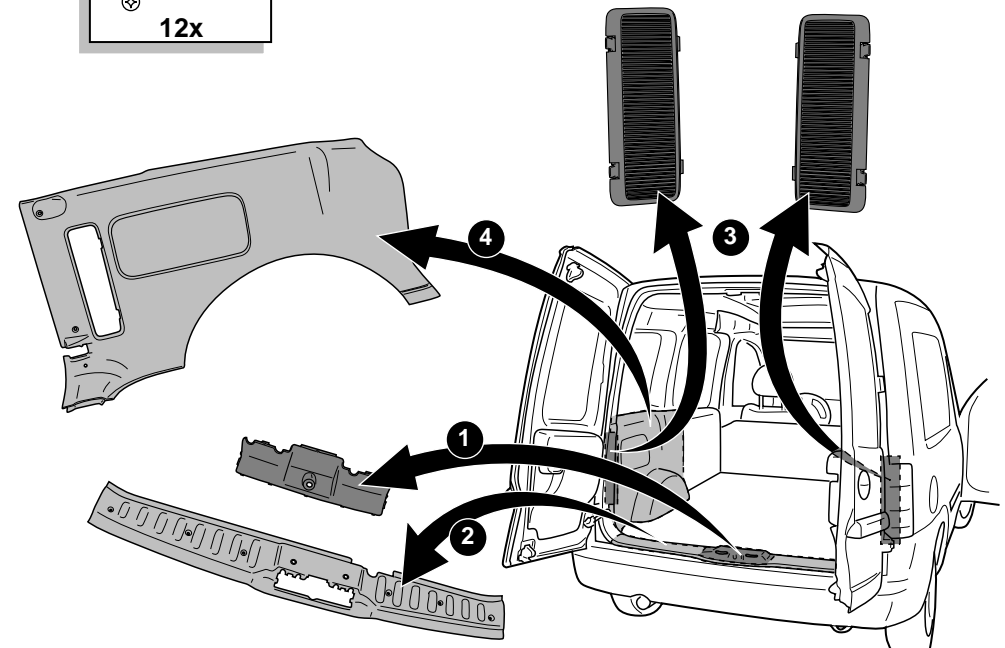


**INFO**

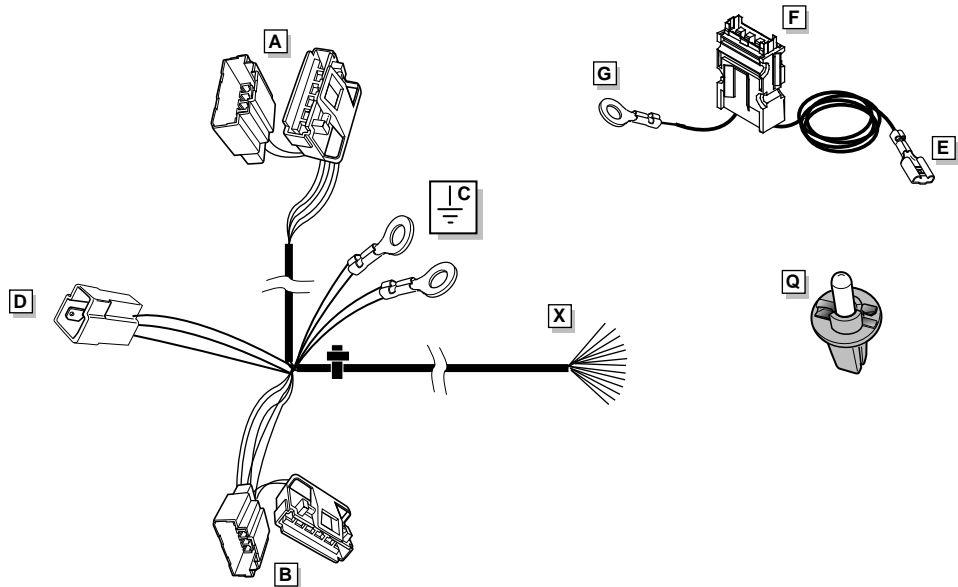


**ROUTING**

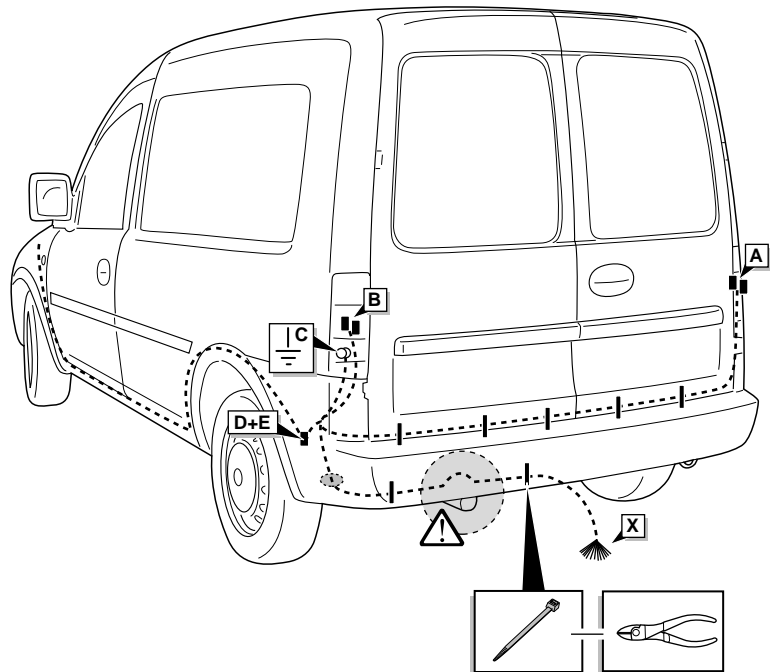


17

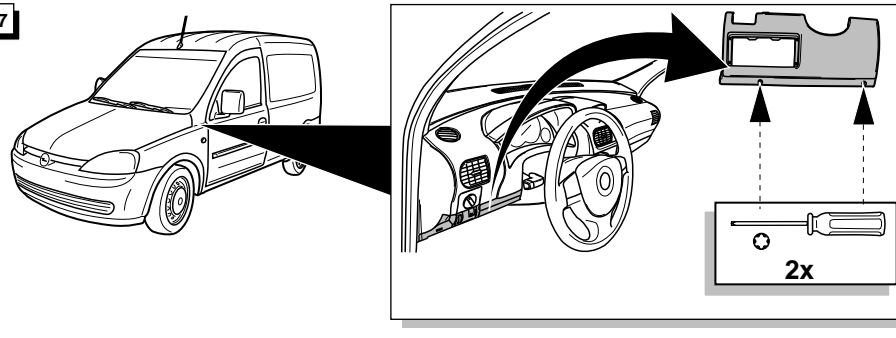


18

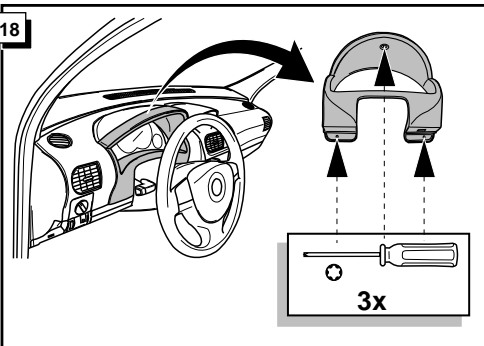


19



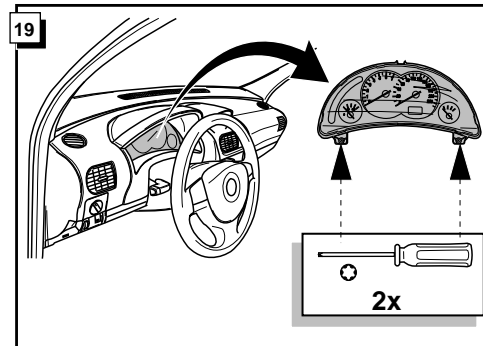


20

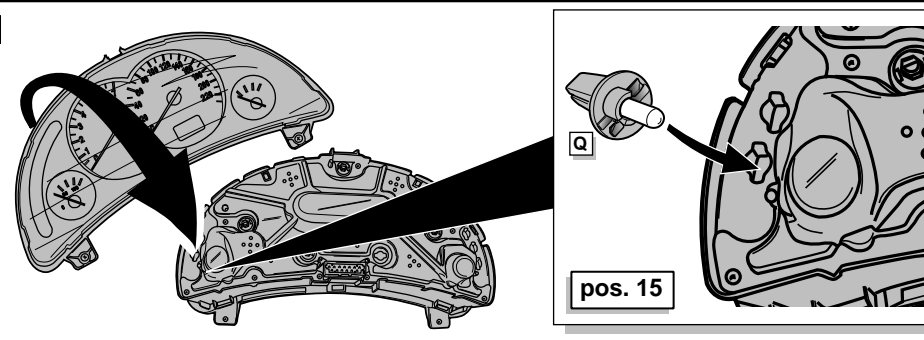

21

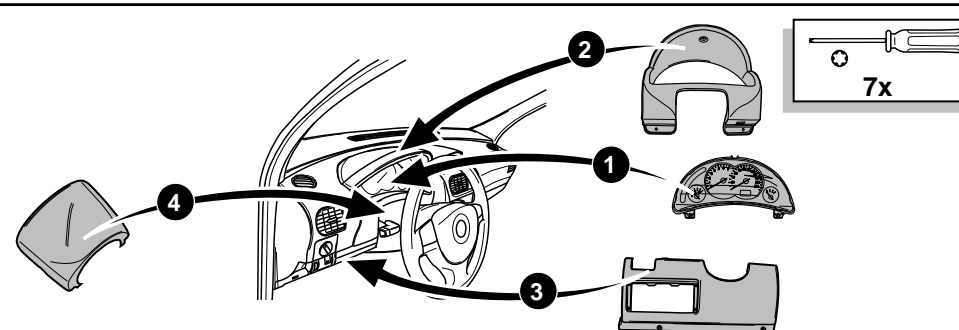

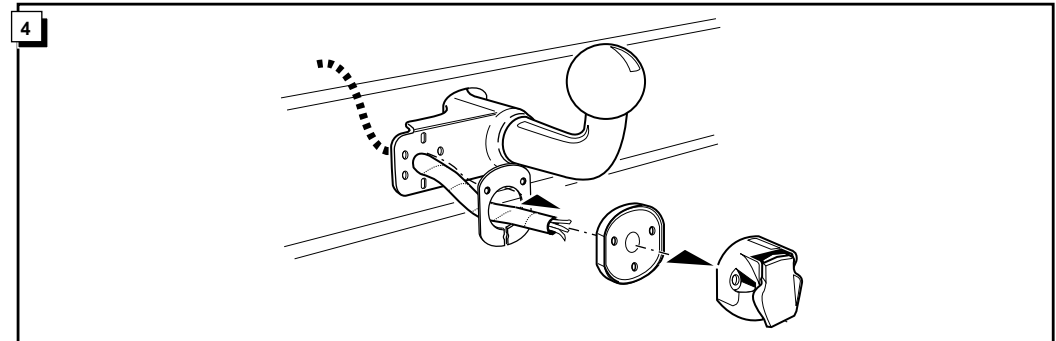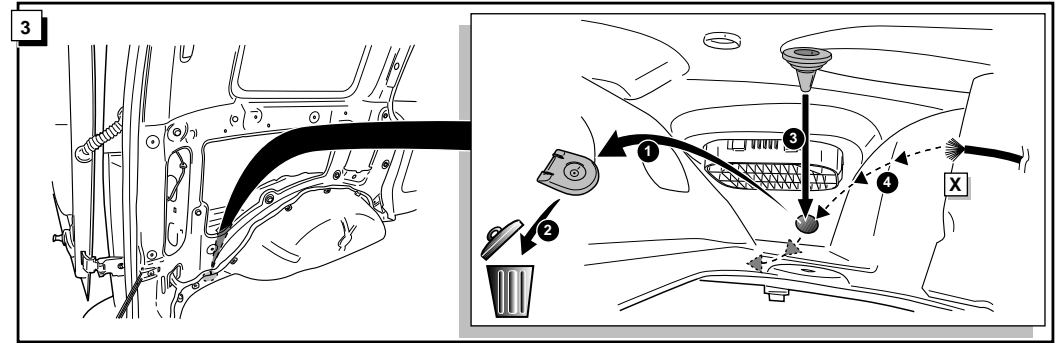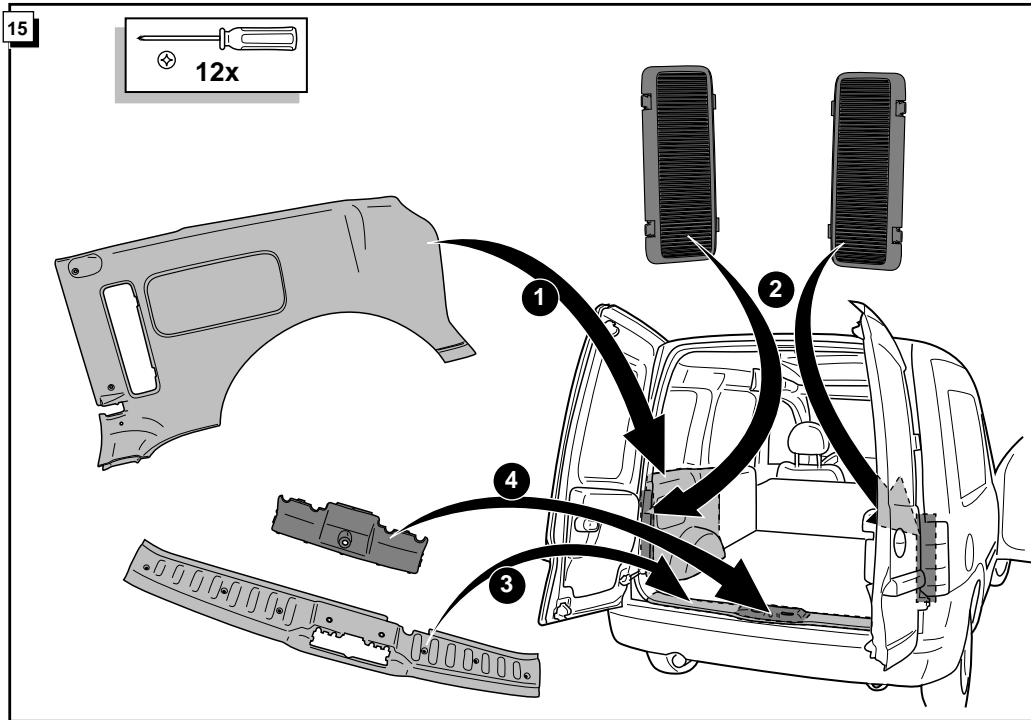

**INFO**


**!**

**Fig. 16** bis **Fig. 21** nur wenn C2 gewünscht ist!

**Fig. 16** à **Fig. 21** seulement quand le C2 est desire!

**Fig. 16** up to **Fig. 21** only if C2 is necessary!

**Fig. 16** t/m **Fig. 21** alleen indien C2 gewenst is!

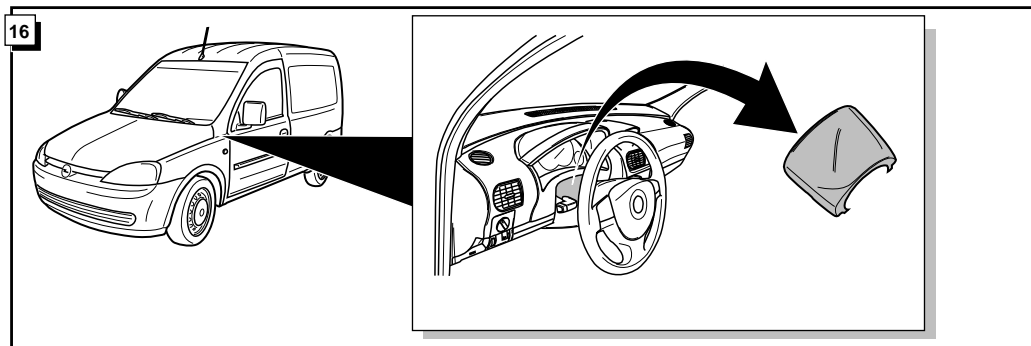

**INFO** Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting

DIN/ISO 11446		D	F	GB	NL
	1/L	gelb	jaune	yellow	geel
	2	blau	bleu	blue	blauw
	2a	grau	gris	grey	grijs
	1-8	weiß	blanc	white	wit
	4/R	grün	vert	green	groen
	5/58-R	braun	marron	brown	bruin
	6/54	rot	rouge	red	rood
	7/58-L	schwarz	noir	black	zwart
	Reverse	schwarz/rot	noir/rouge	black/red	zwart/rood
	30+	braun/weiß	marron/blanc	brown/white	bruin/wit
	15+	rot	rouge	red	rood
	10	weiß	blanc	white	wit
	12	rot/blau	rouge/bleu	red/blue	rood/blauw
	9	weiß	blanc	white	wit

